


Dishwasher Smeg DD13E2

3. Description of the controls

3.1 Front panel

All the dishwasher controls are grouped on the front panel. Programming and option selection are only possible with the **door closed**.

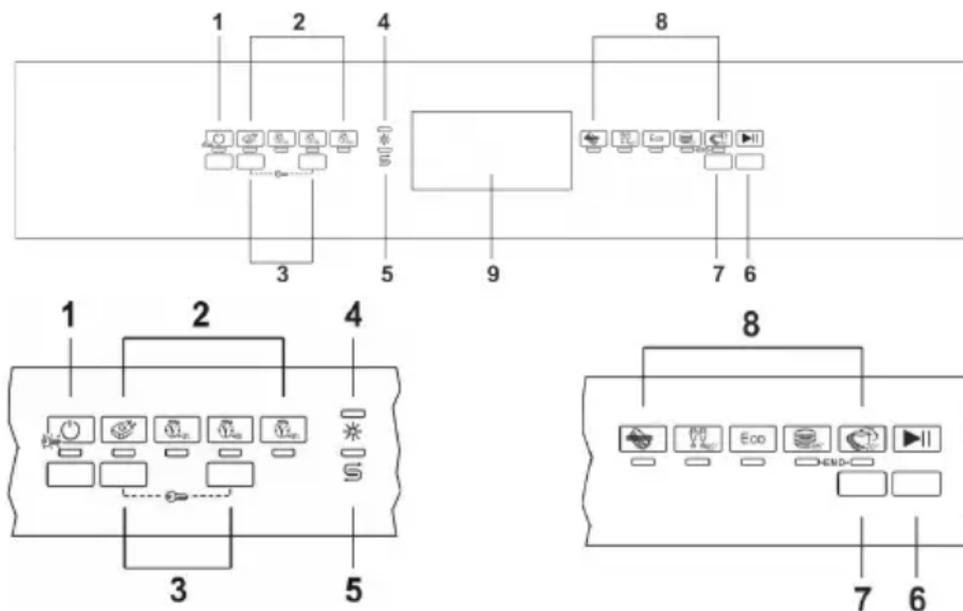

- 1 **ON/OFF** BUTTON AND WARNING LIGHT
- 2 **OPTION SELECTION** BUTTONS AND WARNING LIGHTS
- 3 **“CHILD LOCK”** ACTIVATION BUTTONS
- 4 **RINSE AID INDICATOR LIGHT**
When lit, it indicates that the rinse aid dispenser is empty.
- 5 **SALT INDICATOR LIGHT**
When lit, it indicates that salt container is empty.
- 6 **START/PAUSE** BUTTON
- 7 **PROGRAM SELECTION** BUTTON
- 8 **PROGRAM** LIGHTS
- 9 **HANDLE** TO OPEN THE DOOR

N.B.: symbols and styling are guideline and may vary depending on the model or version of the dishwasher purchased.

SWITCHING ON

When the **ON/OFF** button (1) is pressed, the dishwasher switches on. The indicator lights will display the dishwasher's "status".

PROGRAMMING

Programming operations are only possible with the **door closed**. As long as the door is open, the **PROGRAMS** (8) lights remain off.

PROGRAM SELECTION

Press the **PROGRAM SELECTION** button (7) several times until the light of the program required comes on.

STARTING THE PROGRAM




 
To start the dishwasher, press the **START/PAUSE** button (6) for a few seconds, until the light of the selected program starts to flash (confirmation beep).



The light will flash as long as the program is in progress, to indicate that it is being performed.

END OF PROGRAM

At the end of the program the beeper sounds briefly and the program **lights 4 and 5** (marked "end") flash.

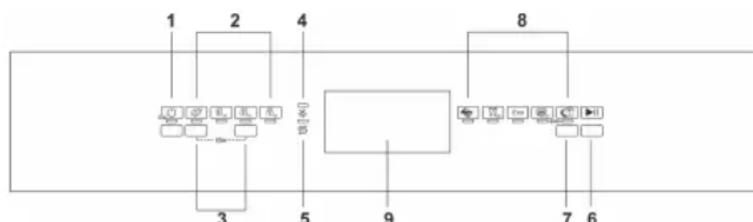

CHANGING A PROGRAM

To change the running program it is necessary:

- to interrupt the running program (see "INTERRUPTION A PROGRAM");
- select the new program;
- start the program (see "STARTING THE PROGRAM").

ANNULLING A PROGRAM

To annul the program, keep the **START/PAUSE** button (6) pressed until the program is interrupted (light on and confirmation beep).

Press button (6) again and keep it pressed until the program **lights 4 and 5** (marked "end") come on.



The water in the tank will be pumped out and the program will end at the point where it was interrupted.




In case that the door is opened during the operation, to the next door closing it is going to be necessary to start the program as shown in paragraph "STARTING THE PROGRAM". The program will resume from the point in which it was interrupted.

In case that the tub temperature is higher than 50°C the program will start about 30 seconds later.

OPTION SELECTION

Options are selected by pressing the relative button by the symbol of the option required; the light comes on to confirm that the option has been activated.

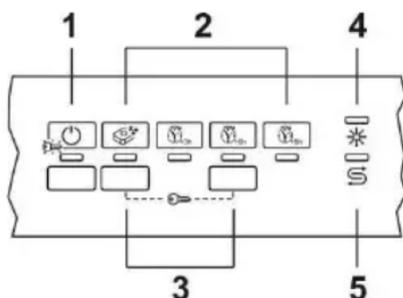

- It is not possible to select any options when the **soak program** is being used.
- All options **except "Flexi Tabs"** are disabled at the end of the wash cycle. To **disable the "Flexi Tabs"** option, **press** the relative button (the light goes out).
- All options, including **"Flexi Tabs"** are disabled when a program is **CANCELLED** after it has begun.



QUICK TIME PROGRAMS

Select this option together with any washing program (except the soak program) to **SHORTEN** the cycle by from a minimum of 10% to a maximum of 55%, depending on the cycle selected. To activate this option, press the **QUICK OPTION** button  (light comes on) after selecting the program required. The option is automatically deactivated at the end of the program.