



# Dishwasher

## User's Manual

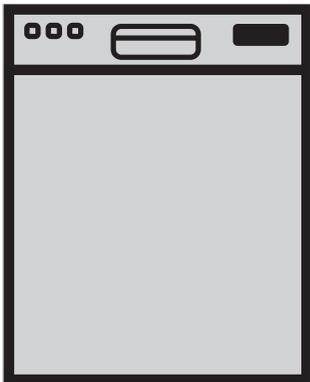

## MDI450 Montpellier Integrated Dishwasher

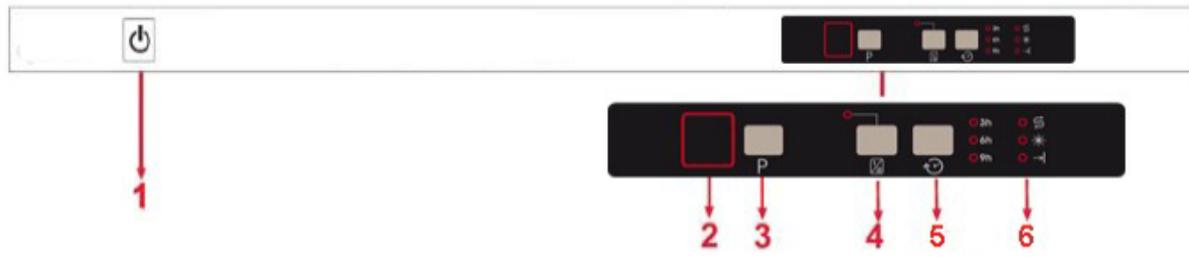

1. Power on/off button
2. Programme display – indicates the selected programme number
3. Programme selection button – allows you to select a suitable programme
4. ½ Load Button – for small loads reduce the duration of the selected programs and decrease the power and water consumption of your machine
5. Delay timer button – delay the start of a programme by 3, 6 or 9 hours by pressing this button. The delay will increase by 3 hours each time the button is pressed. Once you have the required delay press the programme selection button.
6. Salt Warning Indicator – will light up when the machine requires more salt

Rinse Aid Warning Indicator – will light up when the machine requires more rinse aid

End of programme indicator – when a programme has ended the programme indicator will come on and the machine will sound a buzzer 5 times.

To switch the dishwasher on & set the program:

- Press the power on/off key
- Select the programme required using the Programme Selection button
- Choose additional functions if required
- Close the door and the machine will start automatically

Cancelling a program in progress:

- Open the door, press the programme selection button for 3 seconds. The end of programme indicator will flash and “select programme number” will be displayed
- When the programme is cancelled, the dishwasher will make a buzzer sound for 5 times and the “end of programme indicator” will turn on.

Turning the dishwasher off:

- When the end of the programme indicator comes on, switch your machine off using the Power On/Off button.
- Leave the dishwasher door slightly ajar to help aid the drying process.