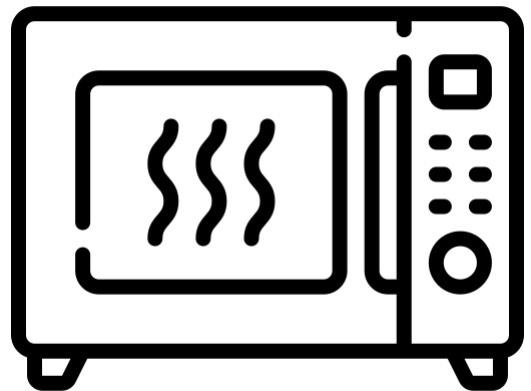
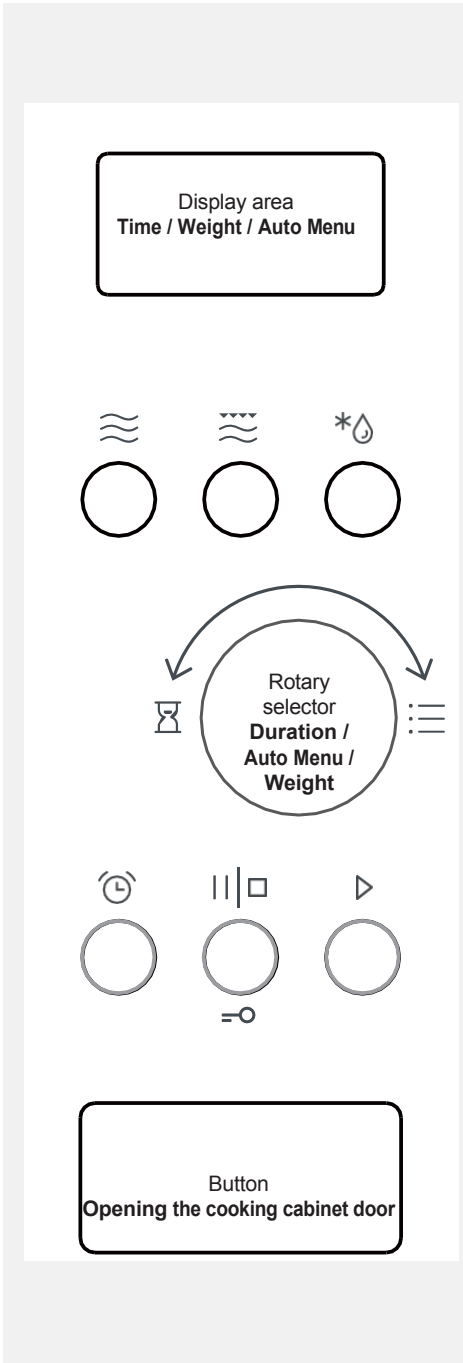


Microwave

Instruction Manual



Control panel



Button
Microwave



Button
Grill / Combi



Button
Defrosting by weight / time-controlled defrosting



Button
Short time alarm clock



Button
STOP / Delete
Additional function:
Switching the childproof lock on and off



Button
START / + 30 seconds / Confirm



Button
Duration



Button
AutoMenu / Weight



Button
Childproof lock

Operation

Set the time

As soon as the appliance is connected to the mains, "0:00" appears in the display area and a short signal tone sounds.

- 1) Press the **button** twice to select the "Clock" function. The hour display starts to flash.
- 2) Setting with **rotary selector** (possible values: 0 - 23).
- 3) Press the **button** again, the minute display starts to flash.
- 4) Setting with **rotary selector** (possible values: 0 - 59).
- 5) Press the **button** to end the setting. " : " flashes, the time is set.

Please note:

The time can only be set when the appliance is connected to the mains. After a power failure or if the appliance has been disconnected from the mains, the time must be reset.

The time setting process can be cancelled at any time by pressing the **button**. The device returns to the initial state.

Cooking and heating with Microwaves

Press the **button**, the display shows "P100" (max. microwave power). You can set the desired microwave power using the **rotary selector** or by (repeatedly) pressing the **button** (possible values: P100, P80, P50, P30 and P10).

Once the desired power level has been selected, press the **button** to confirm the setting.

Then set the cooking time (possible values (mm:ss): 00:05 to 95:00). Press the **button** to start the cooking or heating process.

The remaining time until the appliance switches off automatically appears on the display and the cooking cabinet light switches on.

When the selected cooking time has elapsed, a signal tone sounds and the appliance switches off automatically, microwave generation stops and the cooking cabinet light goes out.

When you open the cooking cabinet door, the cooking cabinet lighting switches on. As soon as you close the cooking cabinet door, the cooking cabinet lighting switches off.

Please note:

The increment of the cooking time setting depends on the running time:

0 -1 min:	Step size 5 seconds
1 -5 min:	Step size 10 seconds
5 - 10 min:	Increment 30 seconds
10 - 30 min:	1 minute increment
30 - 95 min:	Step size 5 minutes

Setting example

To operate the appliance at 80% microwave power for 20 minutes, please proceed as follows:

- 1) Press the **button**, the display shows "P100".
- 2) Press the **button** again or use the **rotary selector** for power setting to select the power setting "P80"
- 3) Press the **button** to accept the power setting. "P80" appears in the display.
- 4) Set the cooking time with the **rotary selector**: 20:00
- 5) Press the **button** to start the cooking or heating process.



The appliance now operates at 80% microwave power for 20 minutes. At the end of the selected cooking time, a signal tone sounds and the appliance switches off automatically.

Microwave power table:

P100 = 700 W
P80 = 560
W P50 =
350 W P30
= 210 W
P10 = 70 W

Operation

Grilling and combined use of grill and microwave

 
 
Press the **button** , "G" (100% grill power) flashes in the display. Press the **button**  repeatedly to select the **grilling** or **combined use of grill and microwave** functions.

Possible settings are

"G" (100% grilling power)

"C-1" (45% grill power + 55% microwave power)


"C-2" (64% grill power + 36% microwave power)

Press the **button**  to confirm the selected function. Then set the cooking time. Setting with **rotary selector** (possible values (mm:ss): 00:05 to 95:00). Press the **button**  to start the grilling or cooking process.

In the "G" function (100% grilling power), two signal tones sound after half the cooking time has elapsed to remind you to turn the food.

Caution! Risk of burns! Always use suitable protective gloves!





After you have closed the cooking cabinet door again, press the **button**  to continue cooking.

Setting example

To let the appliance work for 10 minutes combined with 45% grill power + 55% microwave power (C-1), please proceed as follows:

1) Press the **button** , the display shows "G".

2) Press the **button**  again or use the **rotary selector** for function selection to select the "C-1" function

3) Press the **button**  to accept the function setting. "C-1" appears in the display.

 
4) Set the cooking time with the **rotary selector**: 10:00

5) Press the **button**  to start the grilling process.

The appliance now works for 10 minutes combined with 45% grill power + 55% microwave power.

When the selected cooking time has elapsed, a signal tone sounds and the appliance switches off automatically.

Defrost according to weight

1) Press the **button** , the display shows "dEF1" (defrosting by weight).


2) Then set the weight of the food to be defrosted. Set using the **rotary selector** (possible values: 100 to 2000 g).

The appliance calculates the required defrosting time and shows it on the **display**.

3) Press the **button**  to start the defrosting process.

When the cooking time set by the appliance has elapsed, a signal tone sounds and the appliance switches off automatically.

Defrost after time

1) Press the **button**  twice, the display shows "dEF2" (defrost after time).



2) Use the **rotary selector** to set the defrosting time (possible values (mm:ss): 00:05 to 95:00).

 
3) Press the **button**  to start the defrosting process.

The time-controlled defrosting process is carried out at 30% microwave power.

When the selected cooking time has elapsed, a signal tone sounds and the appliance switches off automatically.

Quick start

Press the **button** , the appliance immediately starts working at 100% microwave power for 30 seconds. Each further press of the **button**  extends the cooking time by a further 30 seconds.

If the Defrost after time ("dEF2"), Grill ("G") or Combi grill ("CG1", "CG2") function is running, you can extend the remaining defrosting or cooking time by 30 seconds by pressing the **button** .

Operation

Auto Menu (automatic cooking programmes)

The appliance has 8 pre-set programmes for easy cooking and heating of various foods.

Select the programme with the **rotary selector** by first turning it clockwise (possible values are "A-1", "A-2", "A-3", "A-4", "A-5", "A-6", "A-7" and "A-8". See also the adjacent table).

Press the **> button** to confirm the selected automatic cooking programme.

Then use the **rotary selector** to select the weight or quantity of the food (possible values: see table opposite).

Please note:

The automatic cooking programmes can only deliver perfect results if you adhere to the respective weight specifications. Any deviation will lead to undefined results!

Press the **> button** to start the selected automatic cooking programme.

When the programme has finished, a signal tone sounds and the appliance switches off automatically.

Auto Menu	Gewicht	Anzeige
A-1 Pizza	200g	200
	400g	400
A-2 Fleisch	250g	250
	350g	350
	450g	450
A-3 Gemüse	200g	200
	300g	300
	400g	400
A-4 Pasta	50g (mit Wasser: 450g)	50
	100g (mit Wasser: 800g)	100
A-5 Kartoffeln	200g	200
	400g	400
	600g	600
A-6 Fisch	250g	250
	350g	350
	450g	450
A-7 Getränke	120 ml	1
	240 ml	2
	360 ml	3
A-8 Popcorn	50g	50
	100g	100

Setting example

To cook 350 g of fish, for example, please proceed as follows:

- 1) Use the **rotary selector** to select the Auto Menu programme "A-6". **A-6** appears in the display.
- 3) Press the **> button** to confirm the programme selection.
- 4) Set the weight using the **rotary selector**: **350**
- 5) Press the **> button** to start the automatic cooking process.

When the required cooking time has elapsed, a signal tone sounds and the appliance switches off automatically.

Operation

Cooking frozen foods

Frozen food must first be defrosted before it can be cooked. Your appliance allows you to set the defrosting and cooking tasks one after the other so that they can be carried out automatically one after the other after starting. The microwave function or grilling or combination grilling can be selected as the cooking function.

This saves time and requires less attention. The device notifies you as soon as both tasks have been completed perfectly and without delay!






Please note:

"Auto-menu programmes" and "Defrost by weight" cannot be combined together or with other tasks!

Setting example:

Defrosting with subsequent microwave cooking

To defrost a frozen food for 5 minutes and then cook it for 7 minutes at 80% microwave power, please proceed as follows:

- 1) Press the  **button** twice, "dEF2" appears in the display.
- 2) Set the cooking time with the **rotary selector: 05:00**
- 3) Press the **button** , "P100" appears in the display.
- 4) Press the  **button** again, "P80" appears in the display.
- 5) Press the  **button** to confirm the selection.
- 6) Set the cooking time with the **rotary selector: 07:00**
- 7) Press the  **button** to start the combined defrosting and cooking process.



Note:



Once started, the entered defrosting or cooking times can no longer be changed.

To enter other defrosting or cooking times, programme again.

After defrosting, a single beep sounds and the appliance starts cooking immediately.

At the end of the cooking process, a five-tone signal sounds and the appliance switches off automatically.

Alarm function (short-term alarm clock)


- 1) Press the **button** , the display shows "00:00".
- 2) Use the **rotary selector** to set the time until the alarm (possible values (mm:ss): 00:05 to 95:00).
- 3) Press the **button**  to start the alarm function.


The set time until the alarm now counts down until "00:00" is displayed. An alarm tone will then sound five times to remind you.

The alarm function can be cancelled at any time by pressing the button.



The display then shows the current time again. time in 24h format.


Info- Function

Press the  **button** while the microwave function is running to show the selected power level for 3 seconds on the display.

Press the  **button** while the grill or combi function is running to show the selected function ("G", "C-1" or "C-2") on the display for 3 seconds.

Childproof lock (key lock)

To lock the control panel against unauthorised operation, the **childproof lock** can be activated by pressing and holding the  **button** for 3 seconds. If the clock is set, the time then appears, otherwise the display shows .

To switch off the childproof lock, press and hold the  **button** for 3 seconds. A long signal tone sounds to indicate that the button lock has been cancelled.



Note:

If the appliance is disconnected from the mains, e.g. in the event of a power failure, the childproof lock switches off.

Cleaning and care

Before carrying out cleaning or maintenance work, you must switch off the appliance and disconnect it from the power supply! You can do this by disconnecting the appliance from the power supply or switching off the main fuse.

We recommend that you clean the microwave oven regularly and remove all food residues from the inside and outside.

Do not remove the cover in front of the microwave outlet in the cooking cabinet!

Use a damp sponge with a little soap. If the appliance is not kept clean, the condition of the surface and inevitably the service life of the appliance may be impaired and a dangerous situation may arise.

If the door or door seal is damaged, the appliance must not be put back into operation until it has been professionally repaired.

Do not clean the appliance with a steam jet cleaner. The use of abrasive cleaners or products containing alcohol or solvents is not recommended as they can damage the appliance.

Do not use abrasive cleaners or hard metal scrapers to clean the glass door, as this can scratch the surface and possibly cause the glass to burst.

Neither water nor objects may get into the ventilation slots of the housing. Do not wipe out the cooking cabinet too damp, otherwise liquid will get through the openings!

If the microwave oven emits unpleasant odours or the cooking chamber is encrusted, boil a cup of water with lemon juice for 2 minutes and then clean the sides with a little washing-up liquid.

The turntable and roller support can be removed for easier cleaning.

Self-help for dysfunctions

There is not always a serious defect or fault if the appliance is not working properly. Before calling customer service, please check the following points:

Sie stellen fest, dass...	Was ist zu tun?
Das Gerät ist laut. Der Drehteller dreht sich nicht richtig.	Die Rollen und den Rollbereich unter dem Drehteller reinigen. Die Position der Rollen überprüfen.
Die Scheibe ist beschlagen.	Wischen Sie das Kondenswasser mit einem Lappen ab.
Der Drehteller dreht sich nicht richtig.	Die Rollen und den Rollbereich unter dem Drehteller reinigen.
Das Gerät erzeugt Funken.	Gerät gründlich reinigen: Fett, Kochrückstände usw. beseitigen. Metallgegenstände entfernen.
Zu Beginn des Programms entweicht vom Grill Rauch.	Sämtliche abgelagerten Kochreste vom Heizelement entfernen.

If the appliance is still not working to your satisfaction after checking these points, please contact customer service.

We need the following information so that our customer service can prepare repairs carefully and provide the required spare parts:

1. Your exact address
2. Your telephone number
(fax number, e-mail address if applicable)
3. When can our customer service visit you?
4. All information contained on the type plate
(double on the title page of these instructions)
5. Date of purchase (proof of purchase)
6. A description of the problem or your service request that is as precise as possible.

Technical Data

Name or trade mark Model identifier	HMG 9701 9701 15	
Microwave power consumption	[kW]	1,05
Microwave power	[kW]	0,7
Power consumption infrared grill	[kW]	1,0
Number of cooking chambers n	[-]	1
Heat source(s) per cooking cabinet	[-]	Electricity
Volume of each cooking chamber V	[l]	17
Type of oven	[-]	Microwave oven with infrared grill
Mass of the device M	[kg]	18,5
Device dimensions (W / H / D)	[mm]	595 / 384 / 319
Turntable Ø	[mm]	245