


Washer dryer Instructions:

Control Panel

All the appliance's control and monitoring devices are placed together on the front panel.

Display: shows the settings (spin speed, cycle status, flexi time, maximum recommended weight, drying levels, child lock, clean programme). The settings can be modified using the buttons underneath.

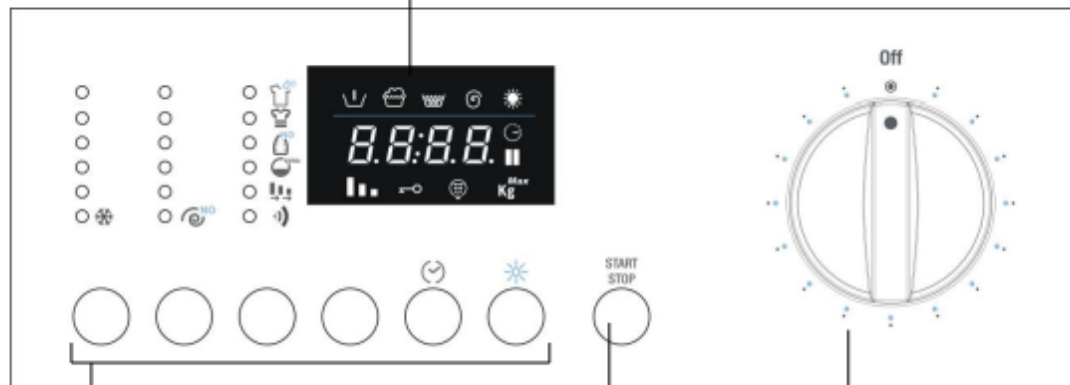

Buttons (from left to right):
Washing Temperature selection
Spin speed selection
Option selection
Confirm option
Time to end
Drying

Start/Pause button:
For starting and stopping working cycles.

Programme Selector
For switching the washer-dryer on and off and selecting programmes. Can be turned in either direction. Does not turn while programmes are in progress.

Adding detergent and fabric conditioner

The internal tray comprises three compartments, marked with the symbols



prewash detergent




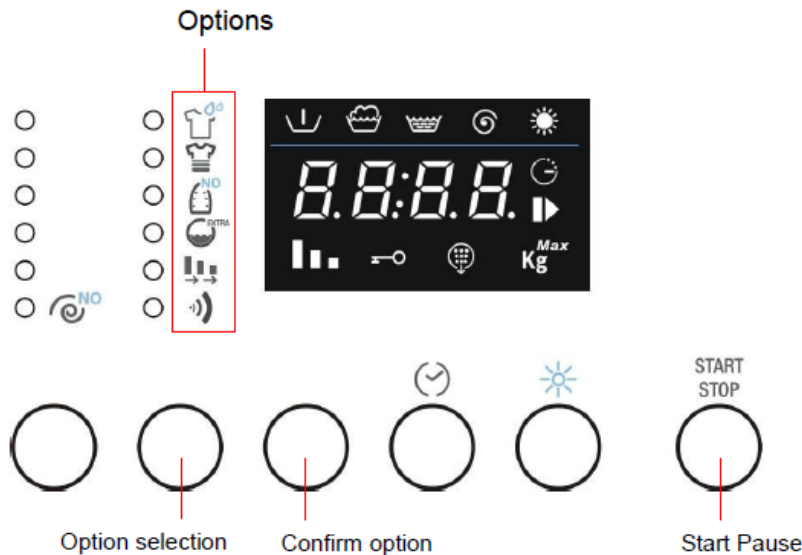
main wash detergent



for fabric conditioner, starch, additives, etc. (e.g. treatment products). The additives are added to the washing tank automatically during the final rinse.

To switch on the appliance and select the programme, proceed as follows:

1. Turn the programmes knob in either direction. This switches on the washer-dryer.
2. Select the washing programme. The time left to the end of the programme and the maximum recommended weight for the selected programme alternate on the display. The symbols on the display light up to identify the information shown.
3. The default spin speed values are shown. The initial settings can be modified using the button underneath the sequence of spin speeds.
4. If spin speed  is set, there will be no spin cycle and the appliance will stop with the tank full. If this value is set the appliance does not perform the final spin and the washing programme ends with water in the tank.



The option selection button can be used to select the following options in sequence:

1. Prewash – use for particularly dirty items
2. Intensive – the max temperature is changed to 60 degrees and washing stage is extended to increase the effectiveness of the detergent
3. Easy iron – produces items which are less creased
4. Water Plus – increases the amount of water used for washing & rinses
5. Flexi Time – reduces the duration of the cycle
6. Rapid – reduces the duration of the washing cycle. Suitable for small amounts of laundry with only light dirt
7. Buzzer – set whether or not the buzzer will sound at the end of the cycle. As standard the buzzer will be on

To confirm the selected option, simply press the “confirm option” button and the LED of the option remains on

To remove an option previously selected, return to the option with the Selection button and press the Confirm Options button. To remove all options previously selected, hold down the Confirm options button for 4 seconds

To start the washing programme

After making your settings, press the Start/Pause button

Once the cycle has started, the display shows the time remaining before the end of the cycle
The washing programme can be interrupted at any time. Press the “Start/Pause” button for 3 seconds. The display will show the word “PAUS” alternating with the time remaining until the end of the cycle. The programme can take between 3-15 minutes to end, subject to the stage it was paused at.

To activate the Child Lock

Press the Option selection button and hold it down, also press the Confirm options button within 3 seconds.

The child lock symbol lights up to show that the function has been activated.

Repeat the procedure again to deactivate the function