


Dishwasher

User Manual

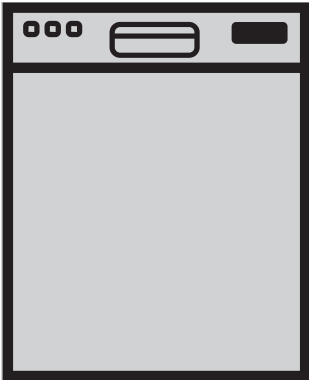




Description of the controls

Upper panel

All the dishwasher controls are grouped on the upper panel. Switching on, programming, switching off, etc. are only possible when the door is open.



The panel shown is given as example: the form of the lights and buttons may vary depending on the model.

| | |
|----------|--|
| 1 | ON/OFF BUTTON Press this button to switch the dishwasher on/off. |
| 2 | SELECTED PROGRAM INDICATOR LIGHTS This light indicates the program selected and the occurrence of a fault (Troubleshooting). |
| 3 | PROGRAM SELECTION BUTTON ↳ + ADJUSTING THE WATER SOFTENING SYSTEM Used to select the wash program required and adjust the water softening system. |
| 4 | WATER HARDNESS ADJUSTMENT ON INDICATOR LIGHT The light flashes to indicate that the appliance is in “water hardness adjustment” mode. SALT WARNING LIGHT This light  Indicates the salt is finished. |
| 5 | RINSE AID WARNING LIGHT This light indicates the rinse aid is finished. |
| 6 | OPTIONS and DISPLAY (on some models only) |





SWITCHING ON, SETTING THE WASHING PROGRAM AND STARTING THE PROGRAM

- Press the **ON/OFF** button (1); the **PROGRAM INDICATOR LIGHT (2) will come on**;
- Keep pressing the **PROGRAM SELECTION** button (3) until the indicator light for the required program lights up;
- Select the **required option** (if any, depending on models);
- Close the door and after about **2"** the program will start; while it is running, the corresponding **LIGHT** will flash (program running indicator).





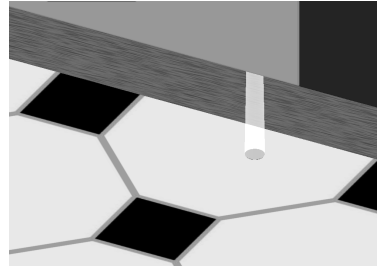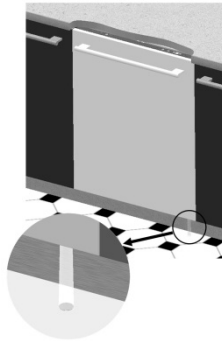

PROGRAM IN PROGRESS INDICATOR LIGHT (on some models only)

When a program is running, a flashing light is projected onto the floor under the right-hand corner of the door. At the end of the program, the light goes out to reduce stand-by electricity consumption.





PROGRAMS TABLE

| PROGRAMME NUMBER & SYMBOL | LOAD CROCKERY AND CUTLERY | PROGRAM PROGRESS | DURATION | CONSUMPTION | |
|---|---|--|-------------|--------------|---------------|
| | | | MINUTES (1) | WATER LITRES | POWER KWh (1) |
|  1 SOAK  | Pans and dishes awaiting completion of the load | Cold prewash | 9 | 5 | 0,02 |
|  2 GLASS | Glass, china and mixed dishes with light dirt. | Wash at 45°C Cold rinse Rinse at 70°C Dry | 59 | 12 | 0,90 |
|  3 ECO (*) Eco EN 50242 | Dishes with normal dirt, even with dried-on residues | Cold prewash (2) Wash at 45°C Cold rinse (2) Rinse at 65°C Dry | ** | ** | ** |
|  4 HALF LOAD | Half load of dishes with normal dirt, washed immediately after use. | Wash at 65°C Cold rinse Rinse at 70°C Dry | 70 | 13 | 1,15 |
|  5 ULTRA CLEAN 70° **** | Very dirty pans and dishes, even with dried-on residues. | Hot prewash Wash at 70°C Cold rinse (2) Rinse at 70°C Dry | 135 | 15,5 | 1,60 |

IMPORTANT: see “NOTES AND REFERENCES” table on the following pages.



If the dishwasher door is open or not properly closed, the washing cycle will not start.