



1. Operation Mode Selector button

- Press this button to select the operation mode of your preference. (See "[Cool/Heat/Auto/Fan Operation](#)" on page 13)
- Available modes may vary with the connected model.

2. Fan Speed/Airflow Direction button

- Used to change the fan speed and airflow direction.
- Available fan speeds may vary with the connected model.

3. Menu/Enter button

- Used to display the Main Menu or enter the selected item (See "[The Main Menu Items Overview](#)." on page 24).

4. Up button ▲

- Used to raise the set temperature.
- The next item on the upper side will be highlighted.
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

5. Down button ▼

- Used to lower the set temperature.
- The next item on the lower side will be highlighted.
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

6. Right button ►

- Used to highlight the next items on the right-hand side.
- The display contents are changed to the next screen.

7. Left button ◀

- Used to highlight the next items on the left-hand side.
- The display contents are changed to the previous screen.

8. ON/OFF button

- Press to start or stop the air conditioner.

9. Operation lamp (Green)

- This lamp lights up during operation.
- This lamp is not lit when the unit operation is OFF.
- This lamp blinks if an error occurs.

10. Cancel button

- Used to return to the previous screen.

11. LCD (with backlight)

- The backlight will be lit for approximately 30 seconds when one of the buttons is pressed.
- The actions linked to the buttons, except for the ON/OFF button, are not carried out when the backlight is not lit.
- When two remote controllers are used to control a single indoor unit, the backlight of the remote controller which is operated first will be lit.
- The Auto Display Off function allows for the display to turn off automatically after a set period of time (see "[Auto Display Off](#)" on page 44).