


Microwave/Oven Instructions:

Control Panel

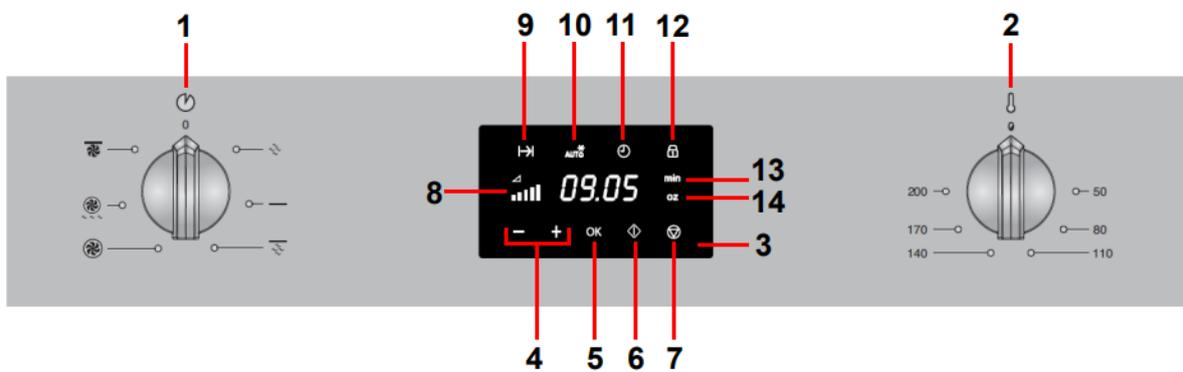

1. Function Selector
2. Thermostat
3. Display
4. "-" and "+" keys
5. OK key
6. Start key
7. Stop key

8. Power level indicator light
9. Operating time indicator light
10. Defrost indicator light
11. Clock indicator light
12. Child lock indicator light
13. Minutes indicator light
14. Weight indicator light

Basic Functions

Microwave:

Use this function to cook and heat vegetables, potatoes, rice, fish, and meat.

1. Rotate the Function Selector (1) to the position corresponding to the Microwave Function



2. The Operating Time Indicator Light flashes.
3. Press the OK key (5).
4. Using the "+" (4) and "-" (3) keys set the desired operating time.
5. Press the OK key (5).
6. The Power Level Indicator Light will start to flash.
7. Using the "+" (4) and "-" (3) keys set the required microwave power level.
8. Press the OK key (5).
9. Press the Start key (6). The oven will start to operate.

Microwave + Grill:

Use this function to cook lasagne, poultry, roast potatoes, and toasted foods.

1. Rotate the Function Selector (1) to the position corresponding to the Microwave + Grill Function



2. The Operating Time Indicator Light will flash, and the Power Level Indicator Light will be on. The operating time will flash in the display.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the OK key (5).
5. The Power Level Indicator Light will flash.
6. Using the "+" (4) and "-" (3) keys select the required microwave power level.
7. Press the OK key (5). 8. Press the Start key (6). The oven will start to operate.

Grill:

Use this function to brown the top of food quickly.

1. Rotate the Function Selector (1) to the position corresponding to the Grill Function



2. The Operating Time Indicator Light and the Display start to flash.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the OK key (5).
5. Press the Start key (6). The oven will start to operate

Hot air:

Use this function to bake food.

1. Rotate the Function Selector (1) to the position corresponding to the Hot-Air Function



2. The Operating Time Indicator Light and the Display start to flash.
3. With the "+" (4) and "-" (3) keys set the desired operating time.

4. Press the OK key (5).
5. Select the desired oven temperature using the Thermostat control (2).
6. Press the Start key (6). The oven will start to operate

Microwave + Hot air:

Use this function to rapidly bake the foods.

1. Rotate the Function Selector (1) to the position corresponding to the Microwave + HotAir Function



2. The Operating Time Indicator Light will flash, and the Power Level Indicator Light will be on. The operating time will flash in the display.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the OK key (5).
5. The Power Level Indicator Light will flash.
6. With the "+" (4) and "-" (3) keys set the desired microwave power level.
7. Press the OK key (5).
8. Select the desired oven temperature using the Thermostat control (2).
9. Press the Start key (6). The oven will start to operate.

Grill + Fan:

Use this function to bake evenly the food and at the same time brown their surface.

1. Rotate the Function Selector (1) to the position corresponding to the Grill + Fan Function



2. The Operating Time Indicator Light and the Display start to flash.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the OK key (5).
5. Press the Start key (6). The oven will start to operate.

Defrosting by time (manual)

1. Rotate the Function Selector (1) to the position corresponding to the Microwave Function



2. The Operating Time Indicator Light flashes.
3. Press the OK key (5).
4. Using the "+" (4) and "-" (3) keys set the desired operating time.
5. Press the OK key (5).
6. The Power Level Indicator Light will start to flash.
7. Using the "+" (4) and "-" (3) keys set the required microwave power level.
8. Press the OK key (5).
9. Press the Start key (6). The oven will start to operate