



## 7. load the dishwasher

### 7.2 Basket loads

#### Lower basket




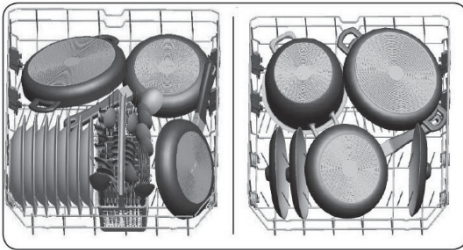


#### Upper basket

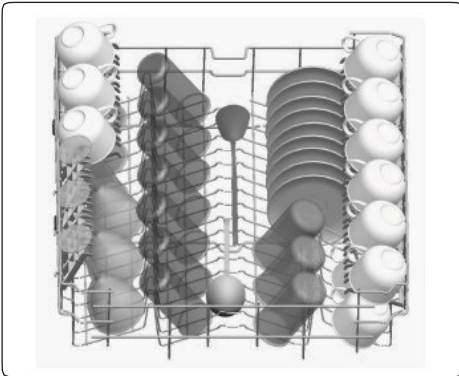


#### Incorrect loads

Incorrect loading can lead to poor washing and drying performance. Please follow the manufacturer's recommendations for good washing results.

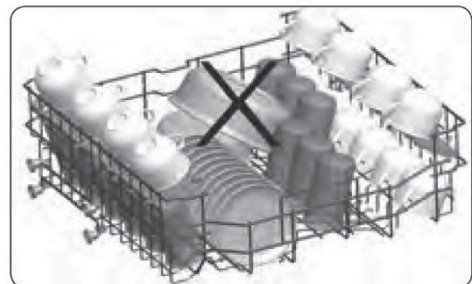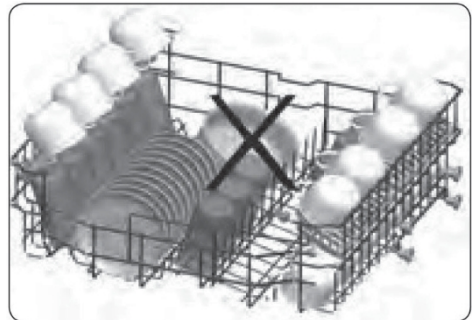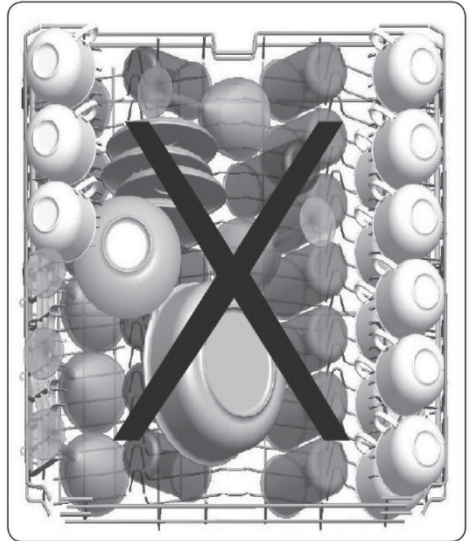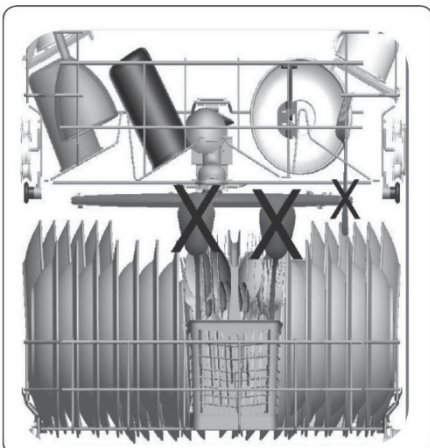

# Dishwasher

## Instruction Manual

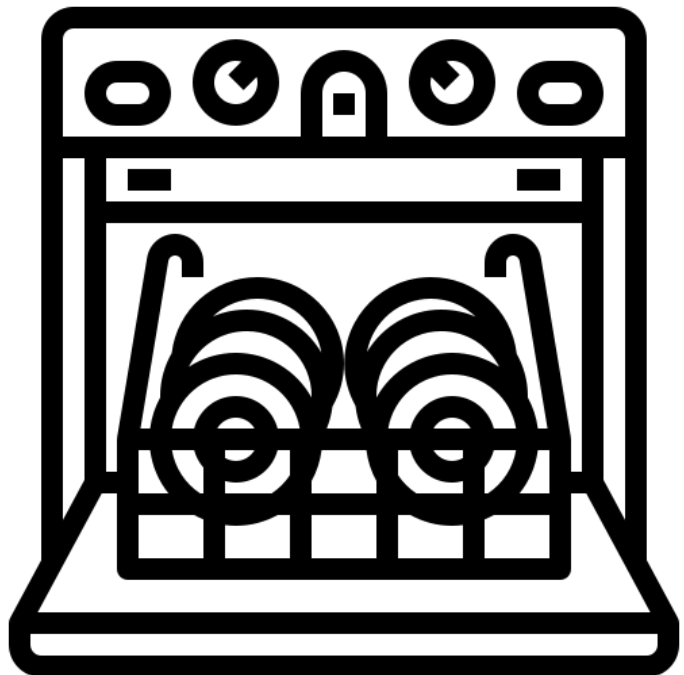

## 8. Washing programmes

### 8.1 Programme table

	Programme	Description of the	Degree of soiling	Detergent quantity	Programme duration (hr:min)	Electricity consumption (kWh/cycle)	Water consumption (l/cycle)
P1	ECO 45°C	Standard programme for Normally soiled crockery with reduced Energy and water consumption	Medium	25 cm <sup>3</sup>	03:25	0,923	12,0
P2	Intensive 65°C	Suitable for heavily soiled Tableware	Strong	25 cm <sup>3</sup>	01:57	1,700	17,2
P3	HygienePRO 70°C	Suitable for heavily soiled crockery that requires hygienic rinsing.	Strong	25 cm <sup>3</sup>	02:07	1,900	16,0
P4	Gastro50 65°C 50 min	Suitable for quick cleaning of normally soiled crockery.	Medium	25 cm <sup>3</sup>	00:50	1,100	12,0
P5	Glasses 40°C 30 min.	Suitable for quick cleaning of light dirty crockery.	Light	25 cm <sup>3</sup>	00:30	0,740	12,4
P6	Pre-rinsing	Suitable for rinsing dishes that will only be washed later. should be flushed.	Light	.	00:15	0,020	4,5

- The programme duration may vary depending on the quantity of dishes, water temperature, ambient temperature and additional functions selected.
- The values given for programmes other than the ECO programme are only guidelines.
- The ECO programme is used to clean normally soiled dishes, as it is the most efficient programme for this use in terms of its combined energy and water consumption. It is also used to assess compliance with EU ecodesign legislation.
- Washing dishes in a household dishwasher generally consumes less energy and water during the use phase than washing by hand if the machine is used according to the manufacturer's instructions.
- Only use powder detergent for short programmes.
- Short programmes do not include a drying step.
- To aid drying, you should open the door slightly after the programme has finished.



**NOTE:** In accordance with EU regulations 1016/2010 and 1059/2010, the energy consumption values of the ECO programme may deviate.

The programme table corresponds to the 2019/2022 and 2017/2022 regulations.

## 9. Operation



- 1 On/off button
- 2 Programme selection button
- 3 Display
- 4 Button for start time delay
- 5 Half load button
- i Half load" display
- ii Warning display "Refill regenerating salt"
- iii "Top up rinse aid" warning display

### 1 On/off button

Switch the machine on by pressing the **on/off button (1)**. When the machine is switched on "—" appears on the **display (3)**.

### 2 Programme selection button

Press the **programme selection button (2)** to select a suitable programme for your crockery. The programme starts automatically when the appliance door is closed.

### 3 Display

The **display (3)** alternately shows the number and the total time of the selected programme as well as the remaining operating time.

### 4 Button for start time delay

To delay the start time of a programme by 1 to 19 hours, press the **start time delay button (4)**. Pressing this button once delays the start time by 1 hour; pressing it again increases the delay time. To change or cancel the delayed start time, press the **delayed start time button (4)**. If you switch off the machine while the delay timer is active, the delay time is cancelled.

### 5 Button for half charge

Press the **half load button (5)** to reduce the programme duration and consequently the energy and water consumption.

#### i Half load" display

If the "Half charge" option is selected, the **Half charge indicator (i)** lights up.

#### ii Warning display "Refill regenerating salt"

If there is not enough salt in the container, the **warning display "Refill regenerating salt" (ii)** indicates that the salt container is empty.

#### iii "Top up rinse aid" warning display

If there is not enough rinse aid in the container, the **"Refill rinse aid" warning indicator (ii)** shows that the rinse aid container is empty.




**NOTE:** If you decide not to start the selected programme, refer to the sections "Changing the programme" and "Cancelling the programme".

## 9. Operation

### 9.1 Change programme

Follow the steps below if you want to change a programme during operation:

- ▶ Open the appliance door.
- ▶ Press the **programme selection button (2)** to select a new programme.

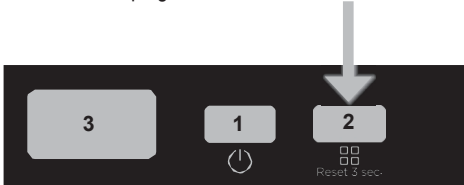

After closing the appliance door, the new programme continues from the point at which the old programme was interrupted.




**NOTE:** Prevent water from splashing out by opening the appliance door just a crack at first.

### 9.2 Cancel programme

Follow the steps below if you want to cancel a programme during operation:

- ▶ Open the appliance door.
- The last selected programme is shown in the **display (3)** displayed
- ▶ Press and hold the **programme selection button (2)** for 3 seconds.

After these 3 seconds have elapsed, "1" appears in the **display (3)**.

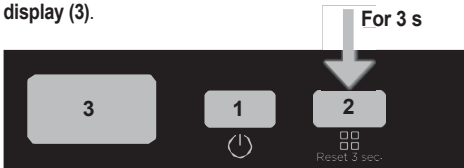

- ▶ Close the appliance door.

Pumping starts after the appliance door is closed and continues for 30 seconds.


A buzzer sounds 5 times when a programme is cancelled.

### 9.3 Switch off the machine

"0" is shown on the display when a programme is complete. In addition, 5 signal tones are emitted.

Follow the steps below if you want to switch off the appliance at the end of the programme:

- ▶ Press the **on/off button (1)**.

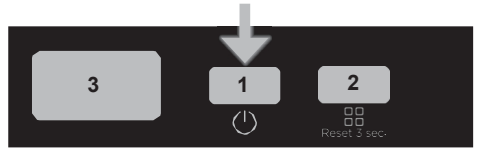

- ▶ If the appliance is not to be used for a longer period of time, unplug it and turn off the tap.



**NOTE:** Do not open the door before completing a programme.



**NOTE:** After completing a programme, keep the appliance door slightly open for faster drying.



**NOTE:** If the appliance door is opened or a power failure occurs, the machine will resume the programme as soon as the door is closed again or the power failure is over.



**NOTE:** If a power failure occurs during drying or the appliance door is opened, the programme will end.


The device is then ready to select a new programme.

## 9. Operation

### 9.4 Set up Summer


Proceed as follows to change the buzzer sound level:

- ▶ Open the appliance door.
- ▶ Press the **programme selection button (2)** and the **start time delay button (4)** simultaneously for 3 seconds.

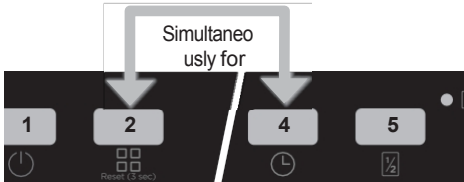

When the sound setting is recognised, a long buzzer sounds and the **display (3)** shows the last set level from "S0" to "S3".

- ▶ To lower the buzzer volume, press the **Programme selection button (2)**.
- ▶ To increase the buzzer volume, press the **Button for start time delay (4)**.

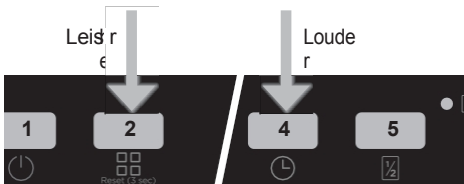

- ▶ To save the selected buzzer volume, switch off the device.

"S0" means that there is no sound output.




The factory setting is "S3".

### 9.5 Energy saving mode

Proceed as follows to activate or deactivate the energy-saving mode:

- ▶ Open the appliance door.
- ▶ Press the **button for start time delay (4)** and **button for half charge (5)** simultaneously for 3 seconds.

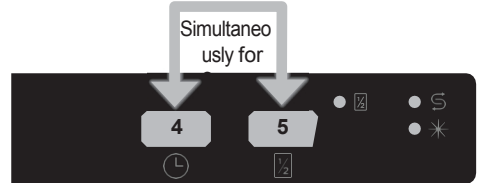

After 3 seconds, the **display (3)** shows the last setting, "IL1" or "IL0".

When the energy-saving mode is **activated**, "IL1" is displayed. In this mode, the device switches off after 15 minutes of inactivity to save energy.

When energy-saving mode is deactivated, "IL0" is displayed. If the energy-saving mode is **deactivated**, the device remains switched on unless it is switched off by the user.

- ▶ Switch off the appliance to save the selected setting.



The energy-saving mode is active in the **factory setting**.

### 9.6 Floorlight (depending on model)

Floorlight	Device status
Green, permanently illuminated	The device executes a programme.
Green, flashing	A programme was cancelled.
Green, fast flashing	The device is faulty. See section "Automatic error warnings and remedial action".
The LED goes out	A programme has ended.