


Appliance Manual:

SMEG SF4400MCX

- | | |
|----------------------------|---------------------------------|
| 1 Control panel | 6 Turntable support |
| 2 Door window glass | 7 Turntable ring |
| 3 Lateral supports | 8 Turntable plate |
| 4 Catches | 9 Rectangular Glass tray |
| 5 Hot Air Output | 10 Rectangular Rack |

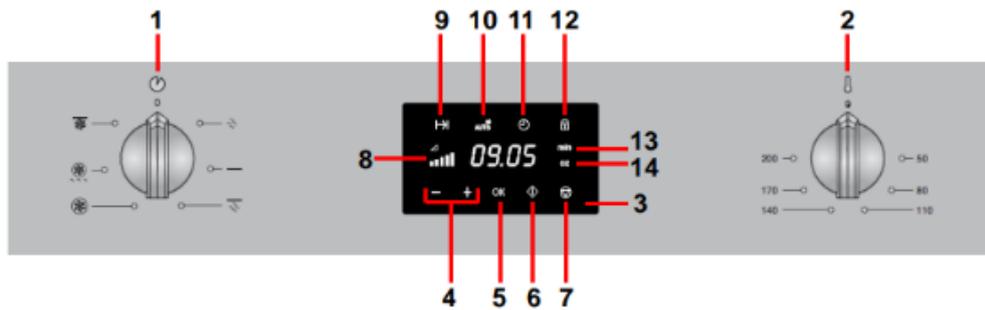

- | | |
|-----------------------------|--|
| 1. Function Selector | 8. Power level indicator light |
| 2. Thermostat | 9. Operating time indicator light |
| 3. Display | 10. Defrost indicator light |
| 4. "-" and "+" keys | 11. Clock indicator light |
| 5. OK key | 12. Child lock indicator light |
| 6. Start key | 13. Minutes indicator light |
| 7. Stop key | 14. Weight indicator light |

Description of Functions

Function	Microwaves Power	Foods	
 Microwave	 200 W	Slow defrosting for delicate foods; keeping food hot	
	 400 W	Cooking with little heat; boiling rice. Rapid defrosting	
	 600 W	Melting butter. Heating baby food	
	 800 W	Cooking vegetables and food. Cooking and heating carefully. Heating and cooking small portions of food. Heating delicate food	
	 1000 W	Cooking and rapidly heating liquids and pre-cooked foods	
 Microwaves + Grill	 200 W	Toasting food	
	 400 W	Grilling poultry and meat	
	 600 W	Cooking pies and cheese-topped dishes	
	 800 W	Use carefully: food might burn.	
	 1000 W	Use carefully: food might burn.	
Grill	---	---	Grilling food
 Microwaves + Hot-Air	 200 W	Meat roast and simmer	
	 400 W	Poultry roast	
	 600 W	Other fast roasts	
	 800 W	Use carefully: food might burn.	
	 1000 W	Use carefully: food might burn.	
Hot-Air	---	---	Roast and bake
Grill + Fan	---	---	Food even browning

Basic settings

Child lock

The oven functioning can be blocked (for example to stop it being used by children).



1. To Block the oven, press the **Stop** key (7) for 3 seconds. When a key is pressed the display shows a Key symbol and the oven performs no function.
2. To unblock the oven press again the **Stop** key (7) for 3 seconds.

Timer



1. Press the "+" key (4) until the **Timer** indicator flashes.
 2. Press the **OK** key (5).
 3. The numbers flash. Press the "+" (4) and "-" (3) keys to set the desired time.
 4. Press the **OK** key (5). The timer will countdown to zero and at the end of the set time the oven will sound 3 beeps every 30 seconds until the **OK** key (5) is pressed.
- To cancel the active Timer function repeat the above steps but setting the time to zero

Basic Functions

Microwaves

Use this function to cook and heat vegetables, potatoes, rice, fish and meat.



1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave

Function .

2. The **Operating Time Indicator Light** flashes.

3. Press the **OK key (5)**.

4. Using the "+" (4) and "-" (3) keys set the desired operating time.

5. Press the **OK key (5)**.

6. The **Power Level Indicator Light** will start to flash.

7. Using the "+" (4) and "-" (3) keys set the required microwave power level.

8. Press the **OK key (5)**.

9 Press the **Start key (6)**. The oven will start to operate.

Grill

Use this function to brown the top of food quickly.



1. Rotate the **Function Selector (1)** to the position corresponding to the Grill Function

2. The **Operating Time Indicator Light** and the **Display** start to flash.

3. With the "+" (4) and "-" (3) keys set the desired operating time.

4. Press the **OK key (5)**.

5. Press the **Start key (6)**. The oven will start to operate.

Microwaves + Grill

Use this function to cook lasagne, poultry, roast potatoes and toasted foods.



1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave + Grill Function .
2. The **Operating Time Indicator Light** will flash and the **Power Level Indicator Light** will be on. The operating time will flash in the display.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the **OK key (5)**.
5. The **Power Level Indicator Light** will flash.
6. Using the "+" (4) and "-" (3) keys select the required microwave power level.
7. Press the **OK key (5)**.
8. Press the **Start key (6)**. The oven will start to operate.

Hot-Air

Use this function to bake food.



- 1 Rotate the **Function Selector (1)** to the position corresponding to the Hot-Air Function .
2. The **Operating Time Indicator Light** and the **Display** start to flash.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the **OK key (5)**.
5. Select the desired oven temperature using the **Thermostat control (7)**.
6. Press the **Start key (6)**. The oven will start to operate.

Microwaves + Hot-Air

Use this function to rapidly bake the foods.



1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave + Hot-Air Function .
2. The **Operating Time Indicator Light** will flash and the **Power Level Indicator Light** will be on. The operating time will flash in the display.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the **OK key (5)**.
5. The **Power Level Indicator Light** will flash.
6. With the "+" (4) and "-" (3) keys set the desired microwave power level.
7. Press the **OK key (5)**.
8. Select the desired oven temperature using the **Thermostat control (2)**.
9. Press the **Start key (6)**. The oven will start to operate.

Grill + Fan

Use this function to bake evenly the food and at the same time brown their surface.



1. Rotate the **Function Selector (1)** to the position corresponding to the Grill + Fan Function .
2. The **Operating Time Indicator Light** and the **Display** start to flash.
3. With the "+" (4) and "-" (3) keys set the desired operating time.
4. Press the **OK key (5)**.
5. Press the **Start key (6)**. The oven will start to operate.

When the oven is working...

Interrupting a cooking cycle

You can stop the cooking process at any time by pressing the **Stop** key once or by opening the oven door.

In both cases:

- **Microwave emission is stopped immediately.**
- The grill is de-activated but is **still very hot. Danger of burning!**
- The timer stops automatically, indicating the operating time that is left.

If you wish, at this time you can:

1. Turn or stir the food to ensure it will be evenly cooked.
2. Change the process parameters.

To restart the process, close the door and press the **Start** key

Altering parameters

The function and temperature can be altered when the oven is operating or when the cooking process has been interrupted by simply turning the respective knob to the new setting.

To change power level and operating time, please proceed as follows:

- Press the "+" and "-" keys to change directly the operating time.
- Press the **Ok key** to enable power change. The **Power Level Indicator** starts to flash.
- Press the "+" and "-" keys to change the power level.
- Press the **OK key**.

Cancelling a cooking cycle

If you wish to cancel the cooking process, rotate the **Function Selector** until zero or press the **Stop key** twice.

End of a cooking cycle

When the set time has elapsed, the oven beeps and the Display shows END.

If you have finished the cooking process, turn the function selector and the thermostat to zero.