

# Operating Instructions – Washer Dryer Machine Smeg

## Model WDF147


### Control Panel

All the appliance's control and monitoring devices are placed together on the front panel.

**Display:** shows the settings (washing temperature, spin speed, cycle status, flexi time, maximum recommended weight, drying levels, child lock, clean programme, time drying and automatic drying levels). The settings can be modified using the buttons underneath.



Buttons (from left to right):  
**Washing Temperature selection**  
**Spin speed selection**  
**Option selection**  
**Confirm option**  
**Drying**  
**Start/Pause button:**  
For starting and stopping working cycles.

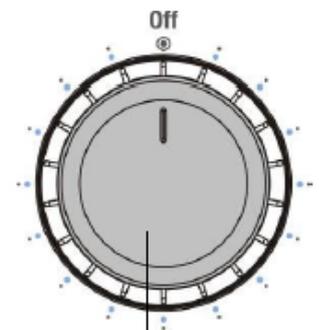

**Programme Selector**  
For switching the washer-dryer on and off and selecting programmes. Can be turned in either direction. Does not turn while programmes are in progress.

### Using the appliance

- First prepare the garments for washing by dividing the items by fabric type/ colour.
- Load the washing machine, a max of 7kg, and close the door until you hear a click, this ensures that the door has been locked properly.
- Next add detergent and additive (if required)

The internal tray comprises three compartments, marked with these symbols:



Prewash detergent



Main wash detergent



Fabric conditioner

The main wash detergent compartment has a tang allowing the use of liquid detergent. To insert it, pull it towards the front and then lower it. Never fill with liquids above the maximum level marked.

- Switch on the appliance by turning the programme knob in either direction.
- Select the washing programme. The default settings can be modified by using the button underneath the sequence of spins and temperatures.
- To confirm the options press the confirm options button and the LED of the options remains on.
- Then press the Start Pause button to start the cycle.
- During the washing/ drying programme the symbols which identify the various phases light up.

### Interrupting or changing the washing programme

The washing programme can be interrupted at any time.

- Press the Start/ Pause button for 3 seconds, the light should flash on and off.
- To change the washing programme turn the programme knob to select a new programme, this will start from the beginning.
- To restart the cycle press the Start/ Pause button again.

### Programme end

Washing/ drying programme are completed automatically. The word END appears on the display and the 'time remaining' light goes out.

- Switch the appliance off by turning the programme knob to OFF
- Unload the laundry from the drum and leave the door ajar.

### Wash and Dry Programme

Automatic washing and drying can be carried out in some programmes. For this programme the laundry must not exceed 4kg for cotton or 2kg for synthetics.

To set the wash-and-dry programme:

- Select the washing programme
- Press the dry button to set the drying required.



**Timed drying:** with this mode, the user selects the drying duration; simply keep pressing to select the time required. The scale of times, shown on the display, starts from 2:40 hours and ends with 0:00 hours.

**Automatic drying:** with a choice of three residual moisture levels at the end of the drying cycle



**Iron-dry:** garments are slightly damp, ideal for easy ironing



**Cupboard-dry** garments are dry and ready for putting away



**Extra dry:** garments are super-dry. Suitable for laundry which is particularly hard to dry.

Whether drying will be at the normal temperature (90) or the delicate fabrics temperature (60) depends on the washing programme set previously.

Once the drying has been set the symbol on the display flashes. It remains constantly on once the cycle enters the drying stage.

### **Dry only Programme**

- Turn the knob to the drying programme required
- Press the dry button repeatedly to set the drying mode required.
- Press the Start/ Pause button to start the drying programme.