


Dishwasher

User's Manual

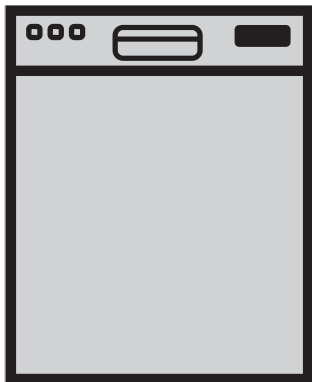



Description of the controls

Upper panel

All the dishwasher controls are grouped on the upper panel. Switching on, programming, switching off, etc. are only possible when the door is open.



The panel shown is given as example: the form of the lights and buttons may vary depending on the model.

1	ON/OFF BUTTON Press this button to switch the dishwasher on/off.
2	SELECTED PROGRAM INDICATOR LIGHTS This light indicates the program selected and the occurrence of a fault (Troubleshooting).
3	PROGRAM SELECTION BUTTON ↳ + ADJUSTING THE WATER SOFTENING SYSTEM Used to select the wash program required and adjust the water softening system.
4	WATER HARDNESS ADJUSTMENT ON INDICATOR LIGHT The light flashes to indicate that the appliance is in “water hardness adjustment” mode. SALT WARNING LIGHT This light Ⓢ Indicates the salt is finished.
5	RINSE AID WARNING LIGHT This light indicates the rinse aid is finished.
6	OPTIONS and DISPLAY (on some models only)




INFORMATION DISPLAY (on some models only)	Information displayed
	Program duration
	Remaining program time
	Delayed start: 1-24 hours
	Error message: Err

<<OPTIONS (6)>>

Depending on the model, this zone may contain the **information display** and one or more of the following options, identified by symbols and described in more detail later in the manual.

 All options **except "Flexi Tabs"** are **disabled** at the end of the wash cycle. To **disable the "Flexi Tabs" option, press** the button (the light goes out).



Flexi Tabs

Flexi Tabs

Option recommended for the use of multi-function tablet detergent.



Hyclean

Hyclean

Removes bacteria more effectively by prolonging the last hot rinse.



Flexi Zone

Spread HALF LOAD WASH

Recommended for washing small loads spread across both baskets.



Delay

PROGRAM DELAY

Allows the start of the program to be delayed by **9, 12 or 24 hours depending on the model.**

PROGRAMS TABLE

The manual may include the programs table for several models. The set of symbols at the top of the table indicates the programs available for your dishwasher.







SWITCHING ON, SETTING THE WASHING PROGRAM AND STARTING THE PROGRAM

- Press the **ON/OFF** button (1); the **PROGRAM INDICATOR LIGHT (2) will come on**;
- Keep pressing the **PROGRAM SELECTION** button (3) until the indicator light for the required program lights up;
- Select the **required option** (if any, depending on models);
- Close the door and after about **2"** the program will start; while it is running, the corresponding **LIGHT** will flash (program running indicator).





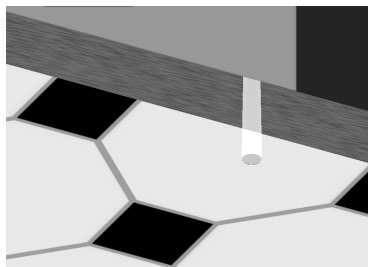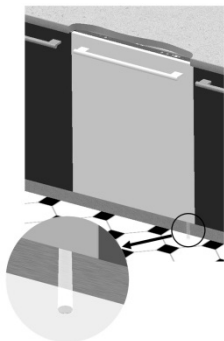

PROGRAM IN PROGRESS INDICATOR LIGHT (on some models only)

When a program is running, a flashing light is projected onto the floor under the right-hand corner of the door. At the end of the program, the light goes out to reduce stand-by electricity consumption.





PROGRAMS TABLE

PROGRAMME NUMBER & SYMBOL	LOAD CROCKERY AND CUTLERY	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			MINUTES (1)	WATER LITRES	POWER KWh (1)
 1 SOAK 	Pans and dishes awaiting completion of the load	Cold prewash	9	5	0,02
 2 GLASS	Glass, china and mixed dishes with light dirt.	Wash at 45°C Cold rinse Rinse at 70°C Dry	59	12	0,90
 3 ECO (*) Eco EN 50242	Dishes with normal dirt, even with dried-on residues	Cold prewash (2) Wash at 45°C Cold rinse (2) Rinse at 65°C Dry	**	**	**
 4 HALF LOAD	Half load of dishes with normal dirt, washed immediately after use.	Wash at 65°C Cold rinse Rinse at 70°C Dry	70	13	1,15
 5 ULTRA CLEAN 70° ****	Very dirty pans and dishes, even with dried-on residues.	Hot prewash Wash at 70°C Cold rinse (2) Rinse at 70°C Dry	135	15,5	1,60

IMPORTANT: see “NOTES AND REFERENCES” table on the following pages.



If the dishwasher door is open or not properly closed, the washing cycle will not start.

 


3.2 Wash programs



Before starting a wash program check that:

- The water supply tap is **open**.
- The softener **container contains regenerating salt**.
- The **correct amount of detergent** has been added to the **dispenser**.
- The baskets have been **correctly loaded**.
- The spray arms are able to **rotate freely** and without obstruction.
- The dishwasher **door** is securely **closed**.



CANCELLING A PROGRAM IN PROGRESS

- Open the door, taking care to avoid splashes of water, and hold down the **PROGRAM SELECTION (3)** button for a few seconds until the **indicator lights** for programs 4 and 5 illuminate simultaneously (marked "end").



- Close the door.
- After approximately 1 minute the dishwasher will advance to the end of cycle.


CHANGING THE PROGRAM

To change the program in progress, simply open the door and select a new program. When the door is closed the dishwasher will automatically select the new program.



TO SAVE ON ENERGY!...AND PROTECT THE ENVIRONMENT


- Always use the dishwasher **with a full load**.
- Do not wash the dishes in running water.
- Use the washing program that is **most appropriate** for each type of load.
- Do not carry out any preliminary rinsing.
- If available, connect the dishwasher to a hot water supply up to 60°C.

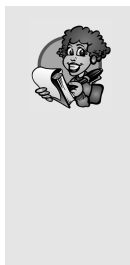

TO REDUCE DETERGENT CONSUMPTION AND PROTECT THE ENVIRONMENT

The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent save on electricity as well, observe the following recommendations:

- **Sort your dishes**, washing delicate items separately from those more resistant to strong detergents and high temperatures.
- **Do not pour** detergent directly onto dishes.

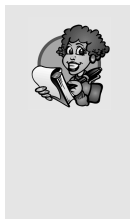

If the door must be opened while a wash cycle is in progress, the program will be interrupted. The corresponding light will continue to flash and a beeper will signal that the cycle has not been completed. You must wait about **1 minute** before closing the door to restart the program. When the door is closed the program will continue from where it was interrupted. This operation should only be carried out **if strictly necessary**, as it could cause problems in running the program.

SWITCHING OFF

At the end of the program the beeper sounds briefly and the lights of programs no. 4 and 5 (marked "end") flash.



To switch off the dishwasher, open the door and press the **ON/OFF** button (1).



ENERGY MANAGEMENT

After **5 minutes of inactivity** (wash cycle completed, stopped or set but not started), the dishwasher switches to **standby** mode to reduce energy consumption.

In this mode, the dishwasher indicator panel (lights or display depending on model) functions more slowly (**switch-on once every 5 seconds**).

REMOVING THE DISHES

At the end of the wash program, wait at least **20 minutes** before removing the dishes, to allow them to cool. To ensure that any drops of water left in the top basket do not drip onto the dishes still in the bottom basket, you are advised always to **empty the bottom basket first**.

**WARNING!**

- *Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the wash cycle.*
- *Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the pump.*
- *Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out.*
- *Do not stack dishes or place them in such a way that they cover each other.*
- *Do not place glasses too close together because they may knock against each other and break, or stains may remain at the point where they touch.*

MAKE SURE that the items being washed are dishwasher-safe.

Items which are not dishwasher-safe:

- **Wooden dishes, pots or pans:** *these may be damaged by the high wash temperatures.*
- **Handmade items:** *these are rarely suitable for washing in a dishwasher. The relatively high water temperatures and the detergents used may damage them.*
- **Plastic dishes:** *heat resistant plastic dishes must be washed in the upper basket.*
- **Dishes and objects in copper, tin, zinc or brass:** *these tend to stain.*
- **Aluminium dishes:** *items made from anodised aluminium may lose their colour.*
- **Silverware:** *silver items may stain.*
- **Glass and crystal:** *in general, glass and crystal objects can be washed in the dishwasher. However, certain types of glass and crystal may become dull and lose their clarity after many washes. Therefore, for these items we recommend using the most gentle program available.*
- **Decorated items** *are generally able to withstand washing in the dishwasher, although the colours may fade with frequent washing. If in doubt as to the fastness of the colours, it is advisable to wash just a few items at a time for approximately one month.*