


# Klarstein Amazonia 8 Dishwasher

## Control Panel

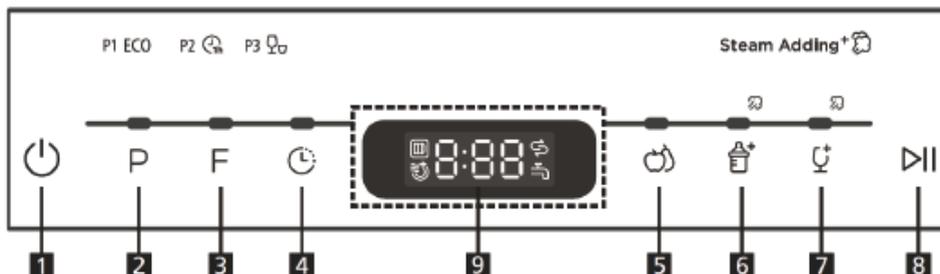

- |               |                 |
|---------------|-----------------|
| 1. Power      | 5. Baby Bottles |
| 2. Programme  | 6. Glass        |
| 3. Function   | 7. Start/Pause  |
| 4. Wash Fruit | 8. Display      |

## Washing programmes

	Standard - For normally soiled dishes. Most efficient program for energy and water consumption
	1 hour - For lightly soiled dishes that do not require special drying
	Quick - A quick wash for lightly soiled dishes
	Wash fruit – Hot Water: suitable for washing fruits with a larger surface such as apples and pears Cold Water: suitable for washing fruits with a smaller surface such as strawberries
	Baby - for rinsing baby bottles
	Glass – For lightly soiled containers such as glasses, crystal glass and fine porcelain (steam is added)

## **Quick operation guide**

- Pull out the basket
- Add a suitable detergent
- Press the POWER button to turn on the unit.
- Select the desired programme. When the programme is selected the corresponding indicator will light up.
- Press the START/PAUSE button to start the dishwasher.
- At the end of the programme the buzzer will sound for 8 seconds. Press the POWER button to turn off the power. Wait a few minutes before unloading the dishwasher so that the dishes can cool down.