


CONTROL PANEL AND BUTTON FUNCTIONS

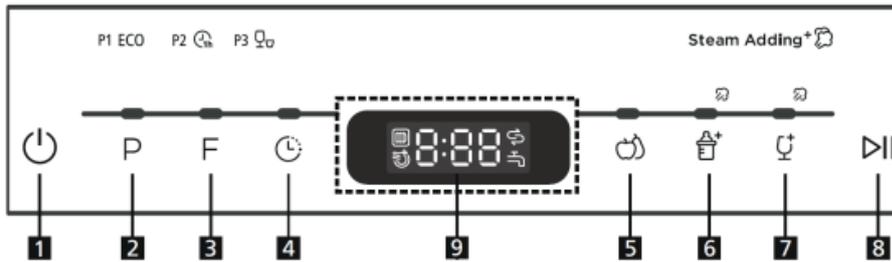

1	Power	Switches device on and off.
2	Programm	Press repeatedly to select one of the following programs: P1 (eco), P2 (hour), P3 (fast).
3	Function	 Cupboard dry: prevents odor, moisture and mold  Extra dry
4	Delayed start	You can program the start so that the dishwasher starts with a delay of 0-24 hours.
5	Wash fruit	Hot water: suitable for washing fruits with a larger surface, such as: apples, pears. Kaltwasser: Geeignet für Früchten mit einer kleinen Oberfläche, wie z. B. Erdbeeren.
6	Baby bottles	Suitable for washing baby bottles.
7	Glass	For lightly soiled containers such as glasses, crystal glass and fine porcelain (steam is added).
8	Start/Pause	Press this button to start or stop the dishwasher. The warning light will flash at startup.
9	Display	Displays the time and functions.

LOADING THE BASKET

- We recommend only using dishes suitable for dishwashers.
- Use only mild detergents.
- For heat-sensitive dishes, we recommend a program with a lower temperature.
- To prevent damage, do not remove glasses and cutlery from the dishwasher immediately after the program has ended.

Unsuitable dishes and cutlery	Conditionally suitable dishes and cutlery
<ul style="list-style-type: none">• Cutlery with wooden, horn or mother of pearl handles• Heat-resistant plastic dishes• Older cutlery with glued parts that are not heat resistant.• Sheathed cutlery or crockery.• Things made of tin and copper.• Crystal glass• Things made of non-stainless steel• Wooden dishes• Plastic dishes and utensils	<ul style="list-style-type: none">• Certain types of glass, as they can become cloudy over time.• Silver and aluminum parts, as they can change color over time.• Glazed dishes, as the glaze disappears the more you wash it.

What you should consider when loading

Remove larger food residues. Soak residues baked in pans beforehand. It is not necessary to rinse the dishes completely clean. Place the items in the dishwasher as follows:

- Place cups, glasses, pots and pans in the dishwasher with the inside facing down.
- Arched objects should be inverted standing so that the water can run off.
- Load the items into the unit so that they can not fall over.
- Make sure that the spray arms can rotate freely and are not obstructed by dishes or protruding objects.
- Do not wash small parts in the dishwasher as they could easily fall out of the basket.
- Make sure that dishes and cutlery do not overlap or cover each other.
- To prevent glass breakage, glasses should not touch.
- Load large items that are difficult to clean in the basket.
- Long and sharp objects must be placed horizontally in the basket to avoid injury.
- For best results, do not overload the dishwasher.

DETERGENT TYPES

Detergents

Due to their chemical composition, dishwashing detergents can be divided into two types:


- Conventional alkaline detergents with corrosive components
- Weak alkaline detergents with natural enzymes

Detergent tabs

The detergent tabs of different brands dissolve at different speeds in the machine. For this reason, they often can not develop their full cleaning power in short programs. Therefore always use the long programs in conjunction with detergent tabs to ensure that the tab dissolves completely.

ADDING DETERGENT

Always fill the detergent chamber immediately before starting a program and follow the instructions in the program table. Your dishwasher requires less detergent and rinse aid than standard equipment. Usually one tablespoon of detergent is enough for a normal rinse load. Heavily soiled dishes require more detergent. Put the detergent into the chamber shortly before starting, otherwise it may become damp and not dissolve as well.

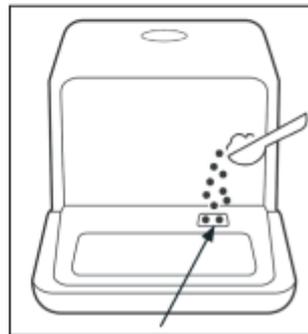

WASH PROGRAMS

Program	Description	Wash cycle	Detergent Before/Main	Running Time Minutes	Consumption kWh	Consumption Liters
ECO (*En5 0242)	For cleaning of normally soiled dishes. Most efficient program in terms of energy and water consumption.	Wash Rinse Rinse Dry	6 g	160	0,43	5
Standard						
 1 hour	For lightly soiled dishes that do not require special drying.	Wash Rinse Rinse Dry	6 g	60	0,4	5
 Wash fruit						
 Quick	Hot water: suitable for washing fruits with a larger surface, such as: apples, pears.	Wash Rinse Rinse	6 g	29	0,35	5
 Wash fruit						
 Baby	For rinsing baby bottles.	Wash Rinse Rinse Dry	/	120	0,5	5
 Wash fruit						
 Glas	Cold water: suitable for washing fruits with a smaller surface, such as: strawberries.	Wash Rinse	/	6	0,01	5
 Wash fruit						
 Glas	For rinsing baby bottles.	Wash Rinse Rinse Dry	/	12	0,2	5
 Baby						
 Glas	For lightly soiled containers such as glasses, crystal glass and fine porcelain (steam is added).	Wash Rinse Rinse Dry	/	90	0,4	5
 Baby						

* EN50242 - This program was used for the test run with the following settings:

- Energy consumption (off): 0.49 W
- Energy consumption (on): 0.49 W

OPERATION IN DETAIL

Starting the washing process

- 1 Pull out the basket.
- 2 Add a suitable detergent.
- 3 Insert the plug into the socket.
- 4 Press the POWER button to turn on the unit.
- 5 Connect the inlet hose to the faucet and make sure that the water supply is set to full pressure OR manually add the water to the tank.
- 6 Select the desired program. When a program is selected, the corresponding indicator will light up.
- 7 Press the START / PAUSE button to start the dishwasher.

Note: If you press the Start / Pause button to pause while washing, the program light will stop flashing. The dishwasher will emit an audible alarm every minute until you press the Start / Pause button again.

Changing the program

If possible, a running program should be changed directly after the start. Otherwise, the detergent may have already dissolved and run out of the machine with the water. If this is the case, refill with detergent. Press the START / PAUSE button to stop the machine. With the door closed, hold down the button for more than three seconds to set the new program.

Display

The display shows the status of the device or the run as follows:

Display	Status
--	The device is in standby mode.
H:MM	Display is not flashing: pause
H:MM	Display is flashing: wash run is in progress
END	The wash run has ended.

Note: If you open the door while the unit is running, the machine will stop automatically. When you close the door again and press the Start / Pause button, the unit will continue to move for 10 seconds.

Adding dishes later

Forgotten dishes can be added at any time before the detergent dispenser opens. In this case, follow these instructions:

- 1 Open the door a little to stop the device.
- 2 When the spray arms stop turning, you can open the door completely.
- 3 Add the forgotten dishes.
- 4 Close the door.
- 5 Press the START / PAUSE button to start the dishwasher.



After the end of the program

At the end of the program, the buzzer will sound for 8 seconds. Press the POWER button to turn off the power. Turn off the tap and open the dishwasher door. Wait a few minutes before unloading the dishwasher as the dishes are still very hot after drying and can easily break. Empty the bottom basket first to prevent water from dripping from the top basket to the bottom.