

Dishwasher Instructions.

CONTROL PANEL



1 On/Off button / Reset button

2 Delay start button

3 Indicators


4 Programme buttons

5 Option button

6 **AUTO** programme button

PROGRAMME SELECTION

Programmes

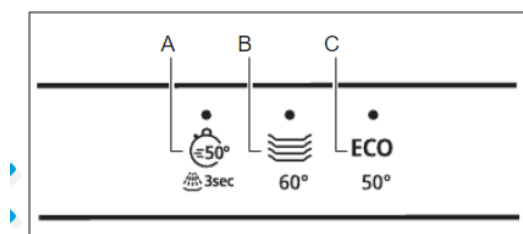

- A. • **Express 50°** (Express 50°) is the shortest programme suitable for washing a load with fresh and light soil.
- **Soak** (Soak) is a programme for rinsing off food remains. It prevents odours forming in the appliance. Do not use detergent with this programme.
- B. **Mix 60°** (Mix 60°) is a programme suitable for washing and drying normally soiled items.

- C. **ECO** (Eco) is the longest programme offering the most efficient use of energy and water consumption for crockery and cutlery with normal soil. This is the standard programme for test institutes. ¹⁾

+ (Extreme)

This option improves the washing results of the selected programme. It increases the wash temperature and duration.

AUTO (Auto)

This program automatically adjusts the wash cycle to the type of load.

The appliance senses the degree of soil and the amount of dishes in the baskets. It adjusts the temperature and quantity of water as well as the wash duration.

To switch the dishwasher on & set the program:

1. Add the detergent tablet into the compartment inside the dishwasher door.
2. Press and hold the on button (1) until the appliance is activated.

3. Keep pressing the PROGRAM SELECTION button (4) until the indicator light for the required program lights up.
4. Select the required option.

Close the door and the program will start shortly afterwards.

To cancel the program:

Press and hold button number (1) the on button for about 3 seconds. The appliance will return to the program selection.

To change the program:

Please follow the cancelling a program in process, then select the program you wish to use.